


CanNeed-STR-100 Seam Stripper

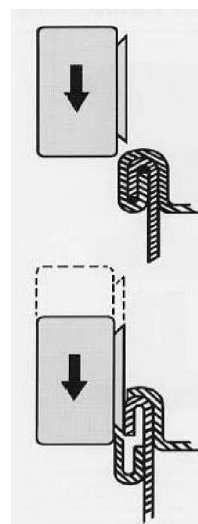

The automatic "CanNeed-STR-100 Seam Stripper" is a sensible, affordable, teardown method to prepare the double seam teardown analysis. One fast, safe teardown operation without damaging or distorting the cover hook. Reduce teardown time for more frequent inspections. Tooling quick change in few seconds. Models are available for most common can sizes of beverage and food cans. When ordering, the end diameter and can height must be specified so that the appropriate change parts are included. Efficient cut and strip both aluminium and steel cans in a single motion. 10 seconds per can. Eliminates the repetitious actions by hand.

An important part of any seam evaluation is the actual teardown of the can seam to determine tightness or wrinkled rating.

Technical data:

Sample size : $\Phi 50-88\text{mm}$, (customized up to 160mm)
Sample types : 2 and 3 piece cans
Power supply : 220V
Dimensions : W250×D400×H380 mm
Weight : 16kg

